

Firmware 1.17.0 for Hasselblad H6D-50c and H6D-100c

The 1.17.0 release is a feature and maintenance release for the H6D cameras that adds new functionality: See User Guide version 1.5 for more detailed information.

New features:

- Power from USB
- HTS info overlay in Live View
- Grid overlay in Video Live View and recording
- Clickable White Balance icon shown in Video Live View and recording

Improvements compared to v1.15.0:

- Incorrect “No Card” indication fixed
- Improved USB stability and tethered performance
- Menu button toggles between main Menu and Control Screen
- Several bug fixes and language updates


Update procedure

Make sure that you use a fully charged battery on the camera. A charge level of 50% or more is required. Please note that the update procedure normally takes about 7-10 minutes, but can in some cases take up to 12 minutes.

Note: It is not allowed to have the USB cable inserted during the update process.

Note: Once the update is completed you must remove and reinsert the battery.

Copy the downloaded file (H6D_v1_17_0.cim) to the SD card and insert it into the camera. Then follow the procedure below:

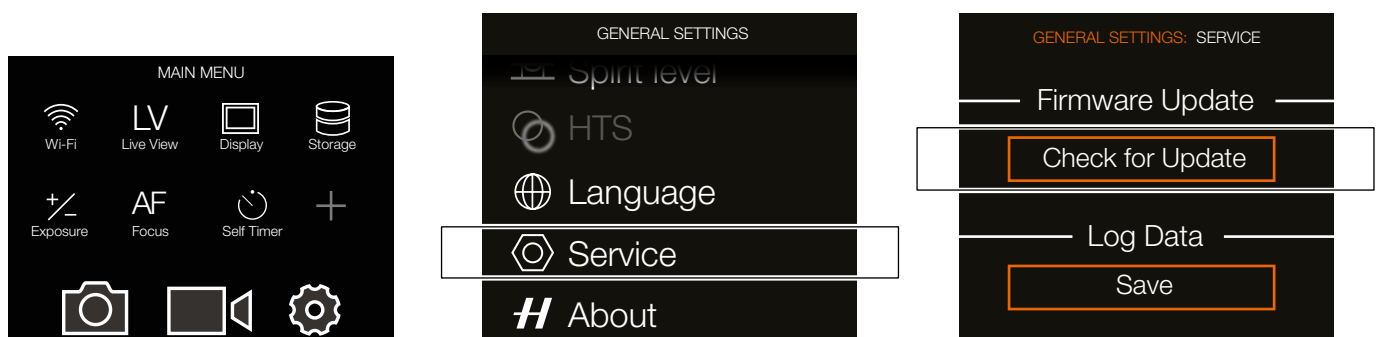

The image shows three sequential screenshots of the camera's menu system. The first screenshot is the 'MAIN MENU' with a 'Settings' icon (a gear) highlighted by a white box. The second screenshot is the 'GENERAL SETTINGS' menu with the 'Service' option highlighted by a white box. The third screenshot is the 'GENERAL SETTINGS: SERVICE' menu with the 'Check for Update' option highlighted by a white box.

1: Select the “Settings Menu” from the main menu.

2: Select “Service”

3: Click “Check for update” and select the file “H6D_v1_17_0.cim” from the list. Finally click “Upgrade”.

June 29, 2017 / The Hasselblad Team