

Firmware 1.17.0 for Hasselblad X1D-50c

The 1.17.0 release is a feature and maintenance release for the X1D-50c camera that adds new functionality: See User Guide version 1.5 for more detailed information.

New features:

- Power from USB
- Added overlay for Spot Metering area
- Visual Overexposure Warning
- Grid overlay in Video Live View and recording
- Clickable White Balance icon shown in Video Live View and recording

Improvements compared to v1.15.1:

- Fixed front focus issue in certain situations
- Incorrect “No Card” indication fixed
- Improved USB stability and tethered performance
- Live View turn off time follows display turn off (max 30 sec)
- Menu button toggles between Main Menu and Control Screen
- Several bug fixes and language updates


Update procedure

Make sure that you use a fully charged battery on the camera. A charge level of 50% or more is required. Please note that the update procedure normally takes about 7-10 minutes, but can in some cases take up to 12 minutes.

Note: It is not allowed to have the USB cable inserted during the update process.

Note: Once the update is completed you must remove and reinsert the battery.

Copy the downloaded file (X1D_v1_17_0.cim) to the SD card and insert it into the camera. Then follow the procedure below:

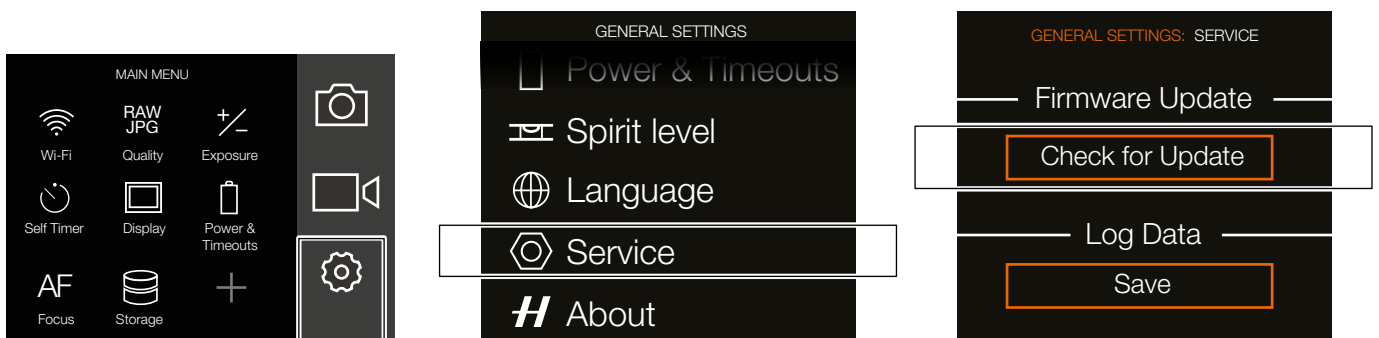

1: Select the “Settings Menu” from the main menu.

2: Select “Service”

3: Click “Check for update” and select the file “X1D_v1_17_0.cim” from the list. Finally click “Upgrade”.