

Firmware 1.17.3 for Hasselblad X1D-50c

The 1.17.3 release is a feature and maintenance release for the X1D-50c camera that adds new functionality and improvements.

New feature:

- Support for the new XCD 120 Macro lens.

Improvement:

- Increased stability when using the GPS receiver.


Update procedure

Make sure that you use a fully charged battery on the camera. A charge level of 50% or more is required. Please note that the update procedure normally takes about 7-10 minutes, but can in some cases take up to 12 minutes.

Note: It is not allowed to have the USB cable inserted during the update process.

Note: Once the update is completed you must remove and reinsert the battery.

Copy the downloaded file (X1D_v1_17_3.cim) to the SD card and insert it into the camera. Then follow the procedure below:

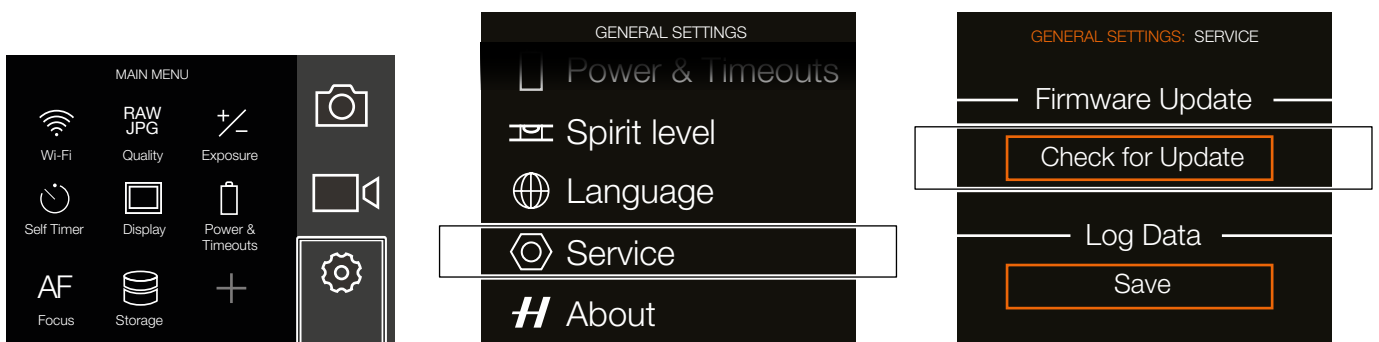

The image shows three sequential screenshots of the camera's menu system. The first screenshot shows the 'MAIN MENU' with various settings icons; the 'Settings' icon (a gear) is highlighted with a white box. The second screenshot shows the 'GENERAL SETTINGS' menu with options like 'Power & Timeouts', 'Spirit level', 'Language', 'Service', and 'About'; the 'Service' option is highlighted with a white box. The third screenshot shows the 'GENERAL SETTINGS: SERVICE' menu with options like 'Firmware Update', 'Check for Update', 'Log Data', and 'Save'; the 'Check for Update' option is highlighted with a white box.

1: Select the “Settings Menu” from the main menu.

2: Select “Service”

3: Click “Check for update” and select the file “X1D_v1_17_3.cim” from the list. Finally click “Upgrade”.

September 7, 2017 / The Hasselblad Team